



BRUSH GUARD

WILL FIT E-Z-GO® RXV™

INSTALLATION INSTRUCTIONS

14-009 (BLACK) 14-010 (STAINLESS)

INCLUDED:

MADJAX BRUSH GUARD
2 UPPER MOUNTING BRACKETS
LOWER MOUNTING BRACKET



Brush Guard




Upper Mounting Brackets



Lower Mounting Bracket

1
Attach upper mounting brackets to brush guard using hardware provided.

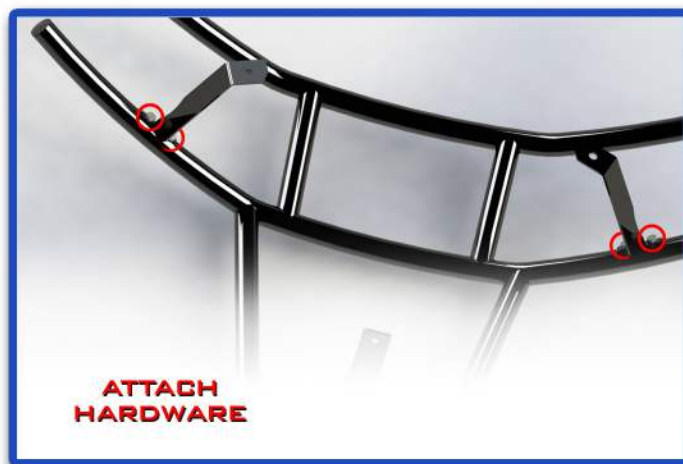

2
Attach lower mounting bracket to brush guard using hardware provided.



Remove factory bolts located under cowl on driver side and passenger side.

Using retained factory hardware from step 3, attach brush guard.



Locate the hole under the cart between the frame to mount the bottom portion of brush guard. Using supplied hardware, attach bottom portion of brush guard as shown.



BRUSH GUARD HARDWARE PACK

- (5) SHOULDER HEX BOLTS (BRACKET MOUNTING HARDWARE)
- (1) 10MM X 25MM SHOULDER HEX BOLT
- (2) 10MM X 2MM WASHERS
- (1) 10 MM ANTI-SLIP NUT