




14-038 RECON STEP BAR INSTALLATION INSTRUCTIONS (BRACKETS SOLD SEPARATELY)

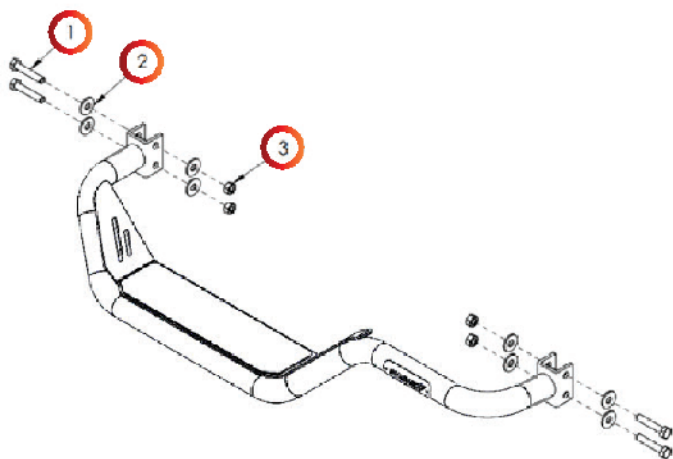

HARDWARE INCLUDED

1. (8) M10 x 55mm Hex Bolts
2. (16) M10 Washers
3. (8) M10 Lock Nuts

TOOLS NEEDED

- 17mm Socket
- 17mm Wrench

STEP 1:




Make sure mounting brackets (sold separately) are installed before beginning Recon Step Bar installation.

Using the M10 x 55mm hardware from the Step Bar, attach step to bracket with 17mm socket and wrench.

Make sure all (4) bolts are in place, then tighten.

REPEAT ON THE OTHER SIDE.

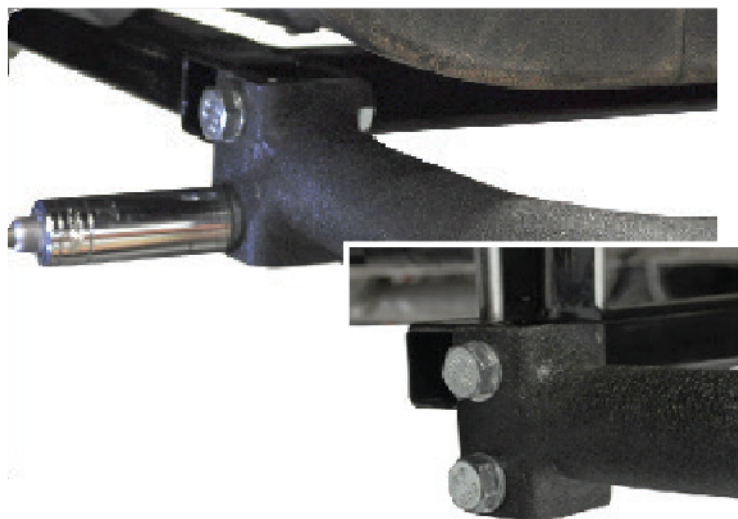

INSTALLATION COMPLETE

WARNING: WE RECOMMEND PROFESSIONAL INSTALLATION. IF YOU CHOOSE TO NOT HAVE THIS PRODUCT INSTALLED BY A PROFESSIONAL, WE HIGHLY RECOMMEND THAT YOU EXERCISE CAUTION, CARE, AND PATIENCE WHEN INSTALLING THIS PRODUCT.