MADJAX®
GENUINE PARTS & ACCESSORIES

01-041 / 01-047 GENESIS 250/300 REAR SEAT KIT INSTALLATION INSTRUCTIONS

CLUB CAR® PRECEDENT®

ITEMS INCLUDED

- Hardware packs 1-8
- Grab Bar
- Lean Back Brackets
- Frame Bracket
- Armrests
- Footrest
- Main Frame
- Struts

TOOLS NEEDED

- Drill
- 17mm Socket
- 17mm Wrench
- 14mm Socket
- 10mm Socket
- #3 Phillips Bit
- 13mm Wrench
- 3/8" Drill Bit

WARNING: WE RECOMMEND PROFESSIONAL INSTALLATION. IF YOU CHOOSE TO NOT HAVE THIS PRODUCT INSTALLED BY A PROFESSIONAL, WE HIGHLY RECOMMEND THAT YOU EXERCISE CAUTION, CARE, AND PATIENCE WHEN INSTALLING THIS PRODUCT.

Bagwell Bracket

Armrests

Footrest

Struts

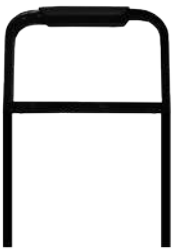

Grab Bar

Main Brackets

Main Frame



Lean Back Brackets
(Sold with 250/300 cushions)
Only needed for premium seats

STEP 1

Remove front seat hardware located behind seat. Remove front seat cushion. Retain hardware.

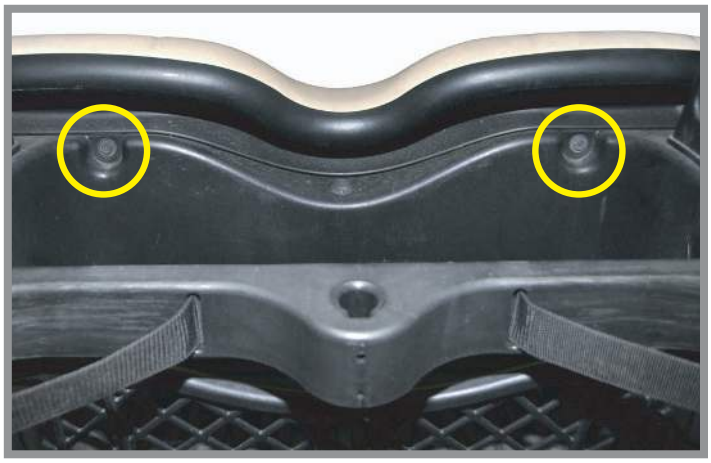

STEP 2

Remove upper rear canopy strut hardware. Use a prop to support canopy. Retain hardware.

STEP 3

Remove lower rear struts from both sides.

STEP 4

Remove hardware from base of basket. Two bolts are located in the rear and two bolts located in the front.

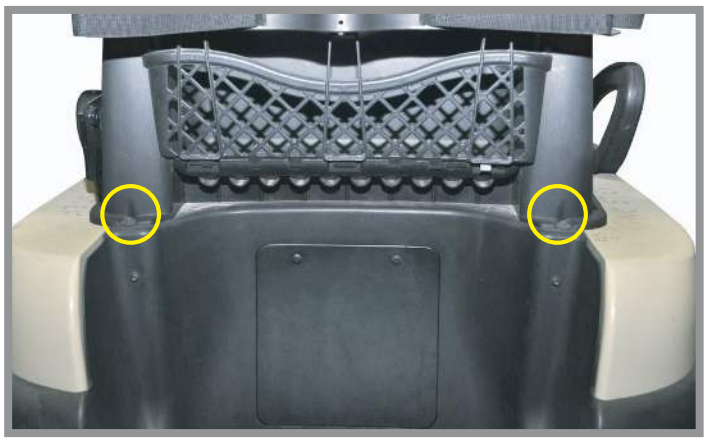

STEP 5

Remove hardware from basket retainer. Remove basket retainer. Retain hardware.

STEP 6

Attach main brackets to cart using 8mmx45mm fine thread hardware from Pack 1 at same location as Step 5.

STEP 7

Attach corner support brackets to main bracket as shown using hardware from Pack 1.

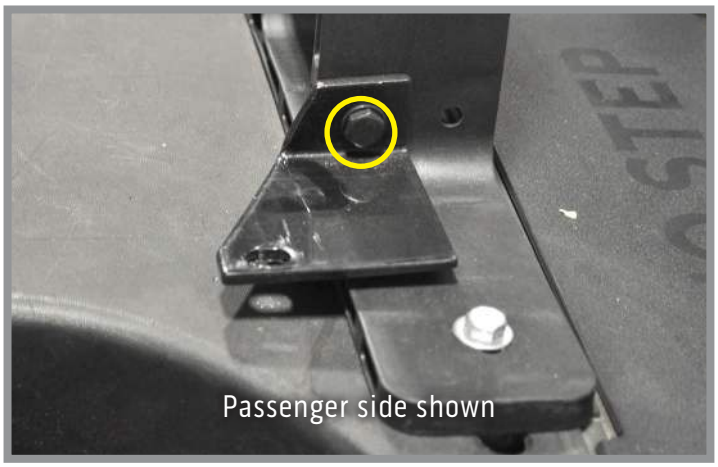

STEP 8

Attach main seat frame to frame/corner brackets using hardware from Pack 2.

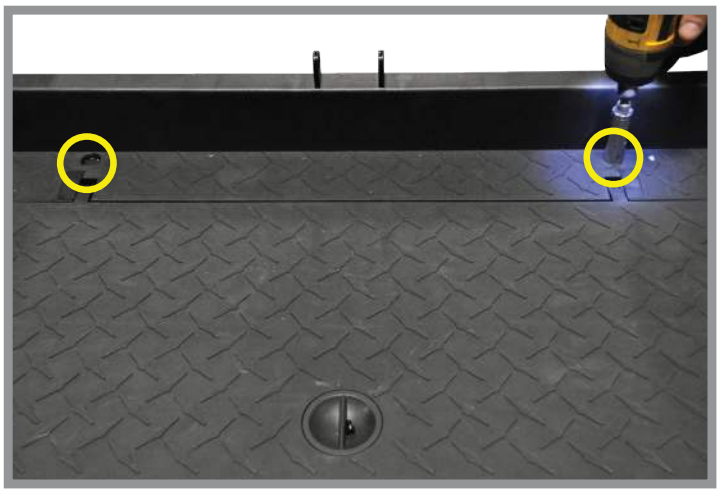

STEP 9

Attach bagwell bracket to poly seat frame using hardware from Pack 2 as shown. Do not tighten.

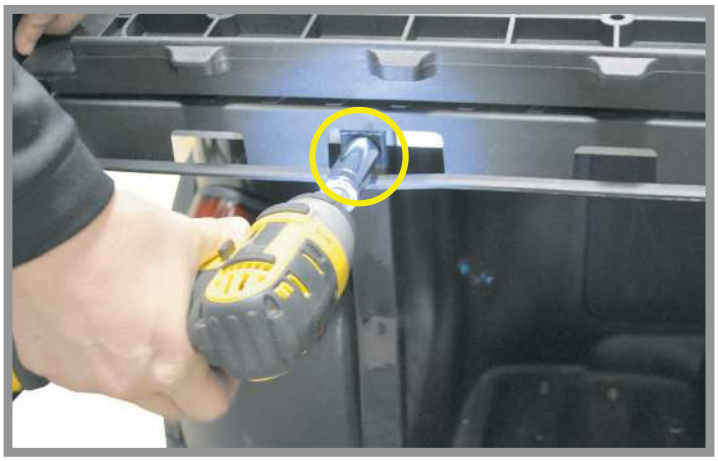

STEP 10

With bagwell bracket resting on bumper, align rear bracket to center of cart, and use a marking pen to mark drilling locations.

STEP 11

Using a 3/8" drill bit, gently drill through the back bumper as shown.

STEP 12

Using a #3 Phillips head bit, attach bagwell bracket to cart using hardware from Pack 3.

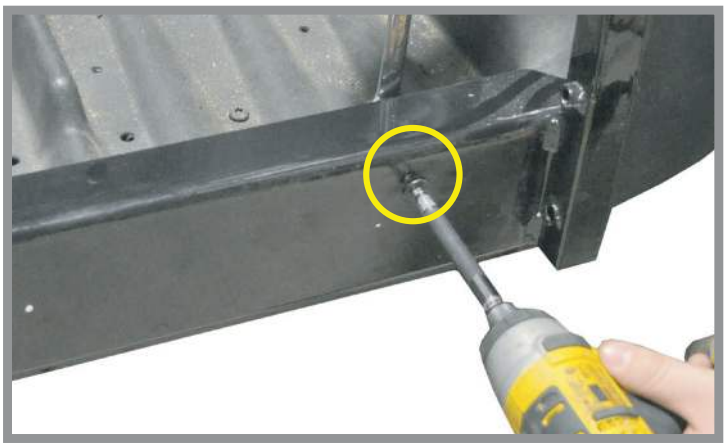

STEP 13

Attach arm rest using art rest hardware from Pack 1.

STEP 14

Place rear struts through main seat brackets as shown, use provided hardware remaining from Pack 1.

A. Top of main bracket should align to outside of cart as shown.

B. Base of main bracket should align to inside of strut as shown.

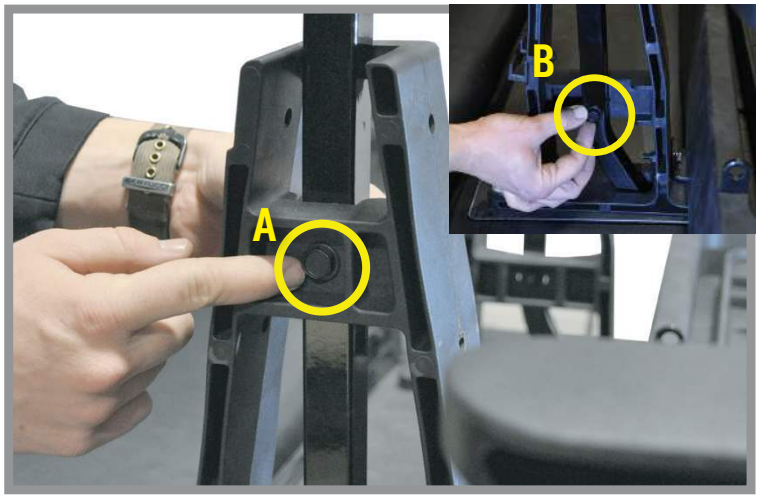

STEP 15

If using the 250/300 seat cushion, attach lean back bracket that was packaged with the cushions. Using the appropriate labeled hole for your cart, attach lean back bracket to main seat bracket using hardware from Pack 5.

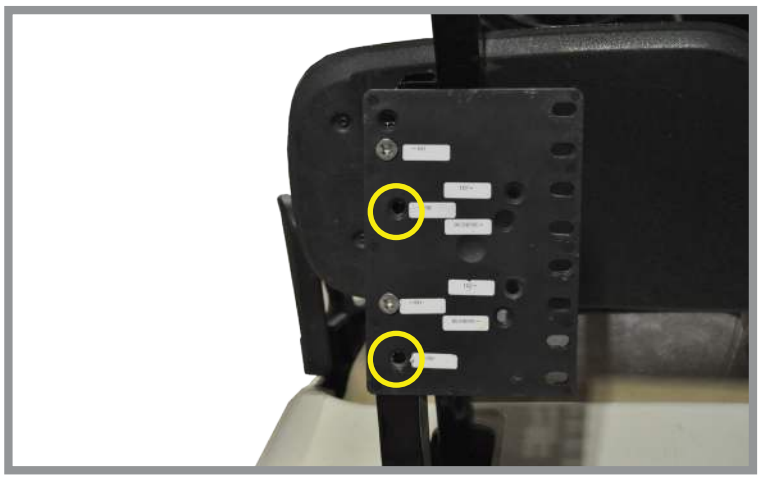

STEP 16

Choose desired height and attach cushion to lean back bracket using hardware from Pack 6.

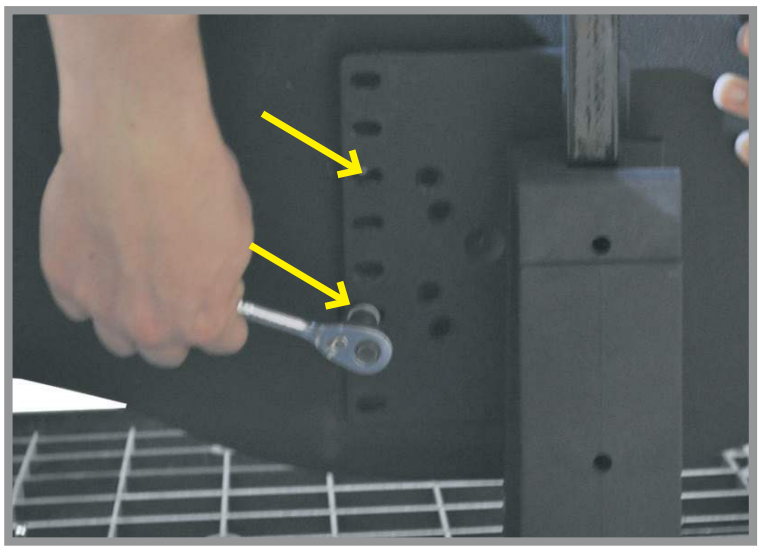

STEP 17

Attach seat support strip to front of seat back bracket as shown using hardware from Pack 6.

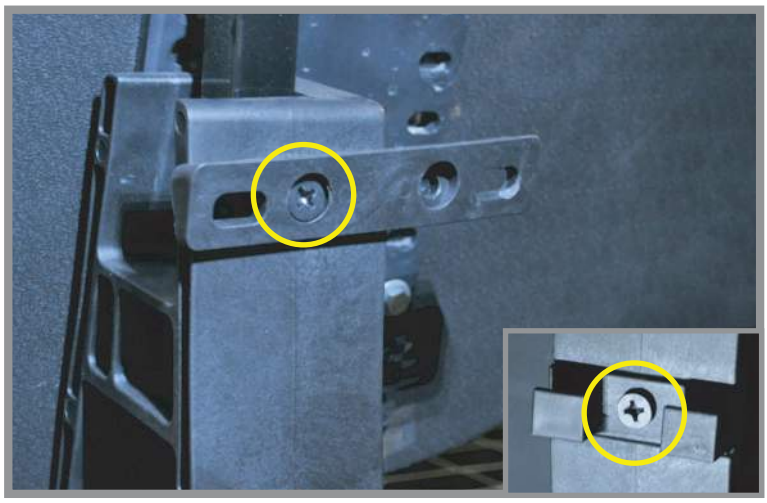

STEP 18

Attach seat back cushion using hardware retained from Step 1 as shown.

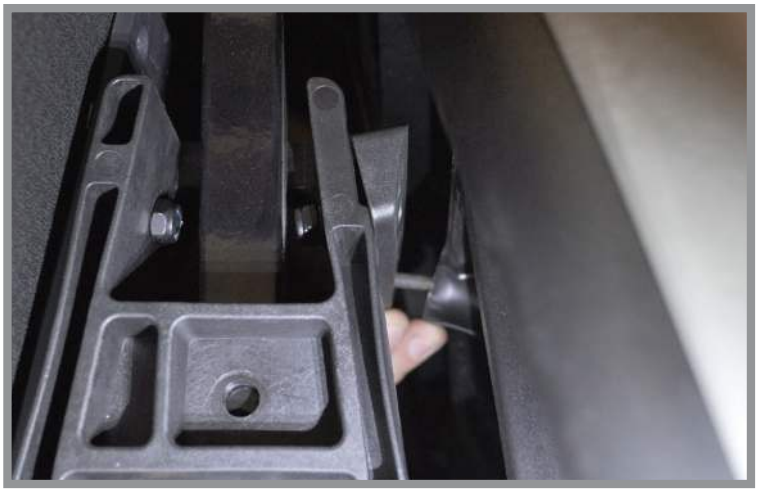

STEP 19

Attach footrest to bracket as shown using 10mm hardware from Pack 7. Repeat process on other side.

STEP 20

Attach grab bar to footrest as shown using 10mm hardware from Pack 7. Repeat process on other side.

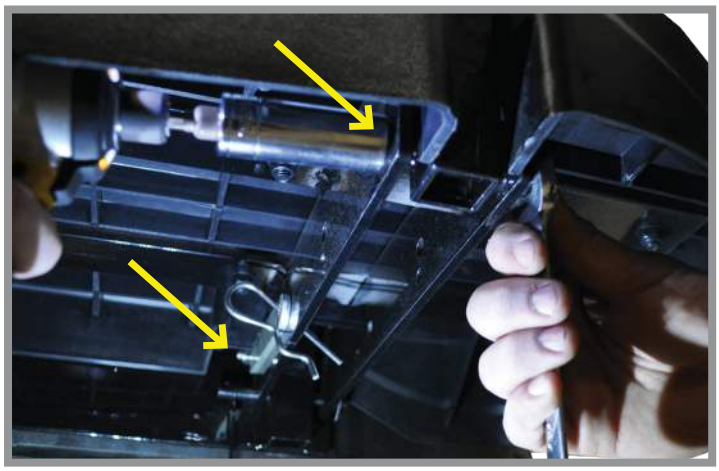

STEP 21

Secure footplate and grab bar as shown with quick release clip from Pack 7.

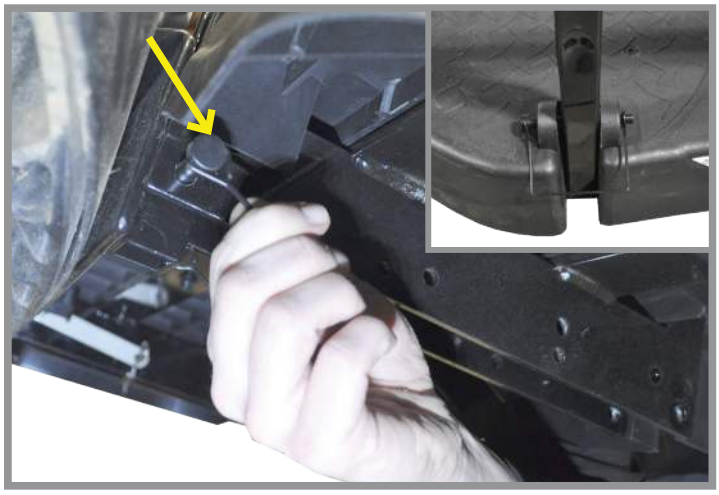

STEP 22

Attach seat bottom cushion as shown using hardware from Pack 8.

STEP 23

Reattach roof to rear struts using hardware retained from Step 2.

STEP 24

Footplate can be folded up by removing the four c-clips and folding forward. To lock footplate in up right poistion use brackets as shown.

INSTALLATION COMPLETE

Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. ("Ingersoll Rand"). Reference to Club Car®, Club Car® Precedent®, or Club Car® DS® or any of Ingersoll Rand's trademarks, word marks, or products is only for purposes of identifying golf carts with which this MadJax® product is compatible. MadJax® products are aftermarket parts and are not original equipment parts. MadJax® is not connected to, affiliated with, sponsored by, or endorsed by Ingersoll Rand or any of its subsidiary companies.

HARDWARE

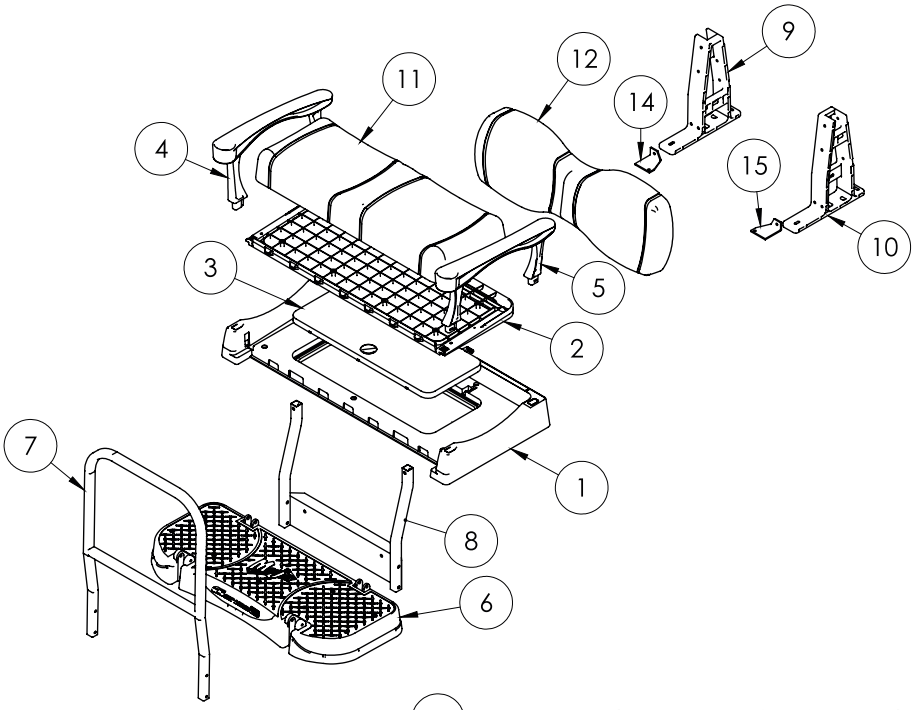

16 Rear Struts (Not Shown in Diagram)

PACK 1

- 4 - 8x45mm Hex Bolt
- 4 - 8x45mm Fine Thread Hex Head Bolts
- 2 - 8x40mm Hex Bolt
- 16 - 8x20mm Flat Washers
- 6 - 8mm Lock Nuts
- 6 - Rubber Washers

PACK 2

- 2 – 8x55mm Hex Bolt
- 4 – 8x15mm Flat Washer
- 2 – 8mm Lock Nut
- 2 – 10x50mm Hex Bolt
- 4 – 10x20mm Flat Washer
- 2 – 10mm Lock Nut
- 8 – Rubber Washers

PACK 3

- 2 – 10x70mm Countersunk #3 Phillips
- 2 – 10x20mm Flat Washer
- 2 – 10mm Lock Nut
- 2 – Rubber Washers

PACK 4

- 4 – 8x30mm Hex Bolt
- 4 – 8x15mm Flat Washer

PACK 5

- 4 – 8x35mm Countersunk #3 Phillips
- 4 – 8x15mm Flat Washer
- 4 – 8mm Lock Nut

PACK 6

- 4 – 6x25mm Hex Bolt
- 4 – 6x15mm Flat Washer
- 4 – 6mm Lock Washer
- 4 – 8x30mm Countersunk #3 Phillips
- 4 – 8mm Lock Nut
- 4 – 8x17mm Flat Washer

PACK 7

- 4 – 10x75mm Hex Bolt
- 8 – 10x20mm Flat Washer
- 4 – 10mm Lock Nut
- 4 – Quick Releast Pins
- 4 – Rubber Washers

PACK 7

- 4 – 10x75mm Hex Bolt
- 8 – 10x20mm Flat Washer
- 4 – 10mm Lock Nut
- 4 – Quick Release Pins
- 4 – Rubber Washers

PACK 8

- 8 – 8x40mm Countersunk #3 Phillips